




Tecnologia para um mundo sempre em movimento.

Starter Relay ZM 3-381 12v - CAP ZM 3-381.91

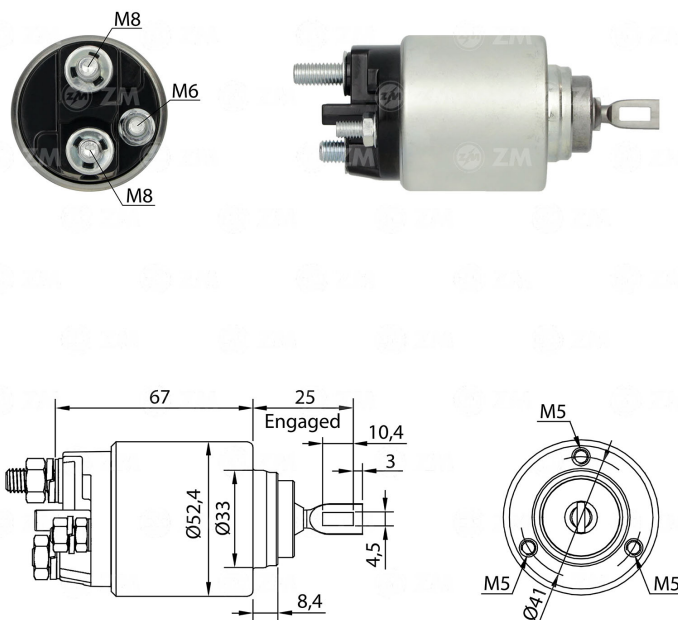

Used on Vehicle	Model variation	From	To
CITROËN			
Jumper	2.2 HDi Box	2006	
Jumper	2.2 HDi Bus	2006	
Jumper	2.2 HDi Flatbed	2006	
FIAT			
Ducato	2.2 D Box	2006	
Ducato	2.2 D Bus	2006	
Ducato	2.2 D Flatbed	2006	
FORD			
Transit	FT 300 2.2 TDCi	2011	
Transit	FT 330 2.2 TDCi	2011	
Transit	FT 330 2.4 TDCi	2008	
Transit	FT 350 2.2 TDCi	2011	
PEUGEOT			
Boxer	2.2 HDi Box	2006	
Boxer	2.2 HDi Bus	2006	
Boxer	2.2 HDi Flatbed	2006	

Original Code

BOSCH
• 2.339.305.051

FIAT
• 77364101

Equivalent Code

BOSCH
• 2 339 305 226

Starter Code

BOSCH • 0.001.109.205 • 0.001.109.387	• 0.001.115.088	• 0.001.115.092
--	-----------------	-----------------

CITROËN
• 5802 AS

FIAT • 96681447	• 9668144780
---------------------------	--------------

FORD • 1385378 • 1709189 • 1740947 • 1741087 • 1912881	• 6C1T 1000 AB • 6C1T 1000 AC • 6C1T 1000 AF • AC1T 11000 AA	• BK3T 11000 DB • CC1T 11000 AB • CC1T 11000 BA • CC1T 11000 BB
--	---	--

PEUGEOT
• 5802 AS

PSA
• 5802 AS

Specifications

SOLENOID VOLTAGE [V]	12
CLAMP: B+	M8
CLAMP: MOTOR	M8
CLAMP: S	M6 Post
